Firmware update of CA 6161 & CA 6163 instruments using MTT

- The file **696268k_fw616x_v0.1.38_usemtt.zip** allows the firmware update while using the MTT software.

- 1. Upload this file from the **Support** section, Firmware CA 6161 / CA 6163.
- Unzip the ZIP file in the chosen directory: you will get a file "mt-swu-image-rodhcom3bimx6smtproto1.swu" whose name should not be modified.
- 3. Launch MTT, and connect to the instrument.
- 4. Select **"Update"** in the **Help** menu.



5. If the MTT application and the other applications from the Dataview suite are from the latest version, a message invites you to carry on the process by clicking on **OK** :



6. If you are no longer connected to internet, a window tells you so. Click on **OK**. This will not prevent you from proceeding with the firmware update of the instrument from the unzip file.



7. If a window indicates that the Control Panel is from the latest version, but that other Control Panels are not from the latest version, you may skip this step by clicking on "**NON**"

MTT	\times
MTT is up to date. Newer versions of other DataView components are available. Do you want to install them?	
Oui Non	

8. In the window "Firmware update", select the file "mt-swu-image-rodhcom3bimx6smtproto1.swu" and then click on "Update".

Firmware update		
Firmware file(.SWU):		
mt-swu-image-ro-dhco	m3bimx6smtproto1.swu	Browse
Update progress:		
l	Jpdate Cancel	Help

Note: With MTT version 1.3.6 and later, it is no longer necessary to select the file. It is directly imported from an update server.

9. Confirm to continue the update

MTT		\times
?	Continue uploading mt-swu-image-ro-dhcom3bimx6smtproto1.swu to the instrument?	
	Oui Non	

The progress bar shows the file transfer to the instrument:

Firmware update	
Firmware file(.SWU):	
mt-swu-image-ro-dhcom3bimx6smtproto1.swu	Browse
Update progress:	
Update Cancel	Help

10. When the file is transferred, MTT invites you to read the messages on the instrument's front panel.

MTT		×
4	Please follow message on instrument panel.	
	ОК	

11. The display of the instrument shows the beginning of the update.

	E N PE	0.%	2	2023-05-10	07:36
2	1 				
\$	Launchir	ng undate	sts		
		Auto	Script		
P					

Validate the update by clicking on the "green tick".



12. Follow the instructions displayed on the front panel of the instrument, which will proceed with two reboots.

Note: the instrument is disconnected from MTT during the update